



Item	W200	W300	Description	Item	W200	W300	Description
1	0199327	0199327	Nozzle Spanner	21	0046249	0046249	Impact Stopper
2	0203222	0203224	Nozzle	22	9905103	9905103	Screw 4.2 x 19
3	refer list	refer list	Swirl Valve	24	0199322	0199322	Scale Plate
4	0199313	0199313	Locknut	26	0199701	0199701	Adjustment Assy
5	0197202	0197205	Pump Housing	29	0199316	0199316	Clamping Spring
6	0033028	0033028	Piston Spring	30	9953572	9953572	Switch
7	0197204	0198207	Piston	31	9951217	9951217	Hook Up Wire
10	9905103	9905103	Screw 4.2 x 19	32	9950201	9950201	Terminal Board
11	0199317	0199317	Housing half shells	33	N/a	N/a	Gasket
12	0198200	0198200	Drive Housing	35	0199320	0199320	Strain Relief
13	0031385	0031385	Shock Absorber	36	9951436	9951408	Power Cable
14	0197206	0198238	Drive Coil 240V 50Hz	37	9951216	9951216	Grommet
17	N/a	N/a	Electronic Module	39	0199209	0199209	Container
19	0024201	0024201	Leaf Spring	40	N/a	0016551	Filter
20	0198203	0198203	Armature	41	0140307	0046581	Suction Tube