

# VACUUM CLEANER USER INSTRUCTIONS

**BEFORE USE - PLEASE NOTE THAT MODELS AS5 & AS10 ARE DRY VACUUM CLEANERS AND ARE TO BE USED FOR DRY VACUUMING ONLY**

- 1) Identify whether your vacuum cleaner is a dry vacuum cleaner or a wet/dry vacuum cleaner.
- 2) Make sure power supply in building is identical to that shown on voltage plate.
- 3) Assemble suction hose, wands and suitable tool.
- 4) Connect suction hose to tank connector of vacuum cleaner.
- 5) Place suction head on tank so that mains cable is opposite suction hose connection.

## **USE - DRY VACUUM CLEANING (ALL MODELS)**

- A. Make sure cloth dust bag is always fitted whether a paper filter bag is used or not.
- B. Make sure tank is perfectly clean and dry.

## **USE - WET VACUUM CLEANING (WET/DRY MODELS ONLY - NOT AS5 OR AS10)**

- A. Remove cloth dust bag and any paper filter bag before use.
- B. Empty dust from tank.

## **SAFETY ATTENTION**

- 1) Machine is not suitable for picking up dusts or liquids that are explosive, inflammable, poisonous or in any way represent a danger to health.
- 2) Every care must be taken to avoid damaging mains cable: in case of replacement, the same quality cable must be used.
- 3) All plugs and sockets used must be at least spray waterproof.
- 4) **Never pick up liquids with a dry vacuum cleaner** and do not use outdoors.

## **CLEANING AND MAINTENANCE**

**ATTENTION! TO AVOID RISK OF ELECTRIC SHOCK, ALWAYS REMOVE PLUG FROM POWER OUTLET BEFORE CONDUCTING ANY MAINTENANCE OR CLEANING WORK. MACHINE MUST NOT BE CONNECTED TO THE POWER SUPPLY.**

- 1) Clean tank - do not let stand for a long time with dust or dirty water.
- 2) Clean cloth dust bag as needed either by beating or brushing.
- 3) Cloth dust bag can be washed with a little washing powder in luke warm water. Must be dried thoroughly before re-use.
- 4) Cloth dust bag should be replaced every 2 or 3 years according to use.
- 5) From time to time, wipe machine inside and out with a damp cloth. Also wipe mains cable. Examine outside of mains cable for cuts or other damage at the same time.

## **SUCTION MOTOR MAINTENANCE**

Motor is built for maintenance-free running and need not be serviced. Carbon brushes and collector should be checked by a service engineer once a year.

## **PROBLEM CAUSES**

- 1) Cloth dust bag coated with dirt.
- 2) Disposable paper filter bag or tank is too full.
- 3) Suction hose, wands or suction nozzle are blocked.

**THIS MACHINE CONFORMS TO THE RADIO INTERFERENCE SUPPRESSION REQUIREMENTS AS LAID DOWN BY THE COUNCIL DIRECTIVE 82/499 EEC.**