

ELECTRIC W/BLASTER

INSTRUCTIONS AND PRECAUTIONS FOR USING A HIGH PRESSURE WATER CLEANER.

1. START-UP.

ATTACH SUPPLY HOSE TO TAP AND TURN ON WATER. CONNECT POWER SUPPLY AND SWITCH ON. PULL GUN TRIGGER TO RELEASE ANY AIR BLOCKAGES IN THE PRESSURE LINE THEN TURN MACHINE ON AT THE UNIT SWITCH.

2. VARYING PRESSURE USING HM UNLOADER VALVE.

TO VARY THE PRESSURE OF THE MACHINE, TURN THE BLACK KNOB ON TOP OF THE UNLOADER VALVE ANTICLOCKWISE TO REDUCE THE PRESSURE AND CLOCKWISE TO INCREASE THE PRESSURE. WHEN INCREASING THE PRESSURE THE KNOB DOES NOT HAVE TO BE REEFED DOWN, JUST TURN IT UNTIL THE PRESSURE GAUGE NEEDLE NO LONGER INCREASES - 2,200 P.S.I.

3. DETERGENT INJECTION.

PLACE THE TUBE WITH THE RED STRAINER INTO A DETERGENT CONTAINER, PULL THE HEAD OF THE NOZZLE BACK TOWARDS THE GUN. THIS WILL DROP THE PRESSURE AND CAUSE DETERGENT TO BE SUCKED INTO THE PRESSURE LINE. WHEN FINISHED APPLYING DETERGENT PUSH THE HEAD OF THE NOZZLE FORWARD AND PRESSURE WILL BE RESUMED. TO VARY THE ANGLE OF SPRAY, TURN THE NOZZLE HEAD TO THE LEFT TO WIDEN THE FAN AND TO THE RIGHT TO PRODUCE A PIN JET. AGAIN DO NOT FORCE THE HEAD.

4. CHANGING THE PUMP OIL.

BEFORE CHANGING THE PUMP OIL, TURN OFF THE POWER SUPPLY TO THE UNIT AND DISCONNECT THE PLUG. DRAIN THE OIL BY REMOVING THE PLUG UNDER THE PUMP OPPOSITE TO THE HEAD. REPLACE PLUG AND REMOVE DIPSTICK. USE ENGINE OIL 20W30 OR EQUIVALENT AND FILL THE PUMP HALF WAY UP THE SIGHT GLASS AT THE END OF THE PUMP. REPLACE DIPSTICK, RECONNECT POWER SUPPLY.

5. SHUTDOWN.

SWITCH UNIT OFF AT MACHINE SWITCH, TURN OFF POWER AT THE POWER POINT AND DISCONNECT POWER PLUG. TURN WATER OFF AT THE TAP AND PULL ON GUN TO REMOVE EXCESS WATER FROM THE HOSE LINE. DISCONNECT SUPPLY HOSE AND PACK THE UNIT UP.

MACHINES WITH BYPASS TANK. - TURN TAP OFF WHILE MACHINE IS STILL ON, PULL ON TRIGGER TO DRAIN WATER OUT OF THE TANK. **DO NOT RUN TANK COMPLETELY DRY.** SWITCH POWER OFF AS ABOVE.

6. PRECAUTIONS

DO NOT ALLOW THE PUMP TO RUN DRY.

DO NOT UNDER ANY CIRCUMSTANCES POINT THE LANCE AT ANOTHER PERSON OR ANIMAL AS SERIOUS INJURY CAN OCCUR.

RETRAW M/120A8TER
ELECTRIC M/120A8TER

DO NOT DIRECTLY SPRAY THE MACHINE WITH HIGH PRESSURE WATER. THE UNIT IS WATER RESISTENT BUT NOT PRESSURE PROOF.

DO NOT COVER THE UNIT OR PLACE IT IN A CLOSED SPACE WHEN IT IS WORKING AS IT COULD OVER HEAT.

DO NOT PULL ELECTRICAL CABLE IN ORDER TO UNPLUG. DO NOT PULL HOSES IN ORDER TO MOVE THE UNIT.

DO NOT DAMAGE OR EFFECT RISKY REPAIRS ON ELECTRIC CABLE. ALWAYS DISCONNECT POWER SUPPLY BEFORE DOING ANY MAINTENANCE OR SERVICE WORK ON THE UNIT.

EXTENSIONS CORDS SHOULD BE AT LEAST 20 AMP AND NO MORE THAN 20 METRES LONG.

UNIT MUST BE RUN ONLY WHEN LEVEL.